

VI.5.3C-SYSTEM-SETDEBUG PROGRAM FCST FUNCTION SET DEBUG (SETDEBUG)

Purpose

Function SETDEBUG prints information for program debugging.

HCL Input

Input to the SETDEBUG Function is through the Hydrologic Command Language (HCL).

The input consists of Techniques and their Arguments (see Section VI.5.3C-SYSTEM-SETDEBUG-TECH [[Hyperlink](#)]).

Sample HCL Input

The following HCL input sets the Preprocessor Data Base trace and debug levels to one:

```
@SETOPTIONS
  PPDTR(1)
  PPDDDB(1)
@COMPUTE SETDEBUG
```